YASHICA

FX-1

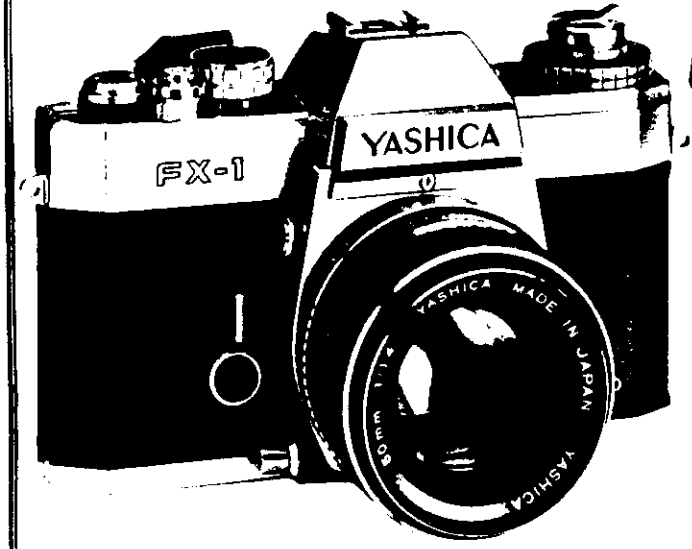

ASSEMBLING CHART

YASHICA CO., LTD.
TOKYO JAPAN

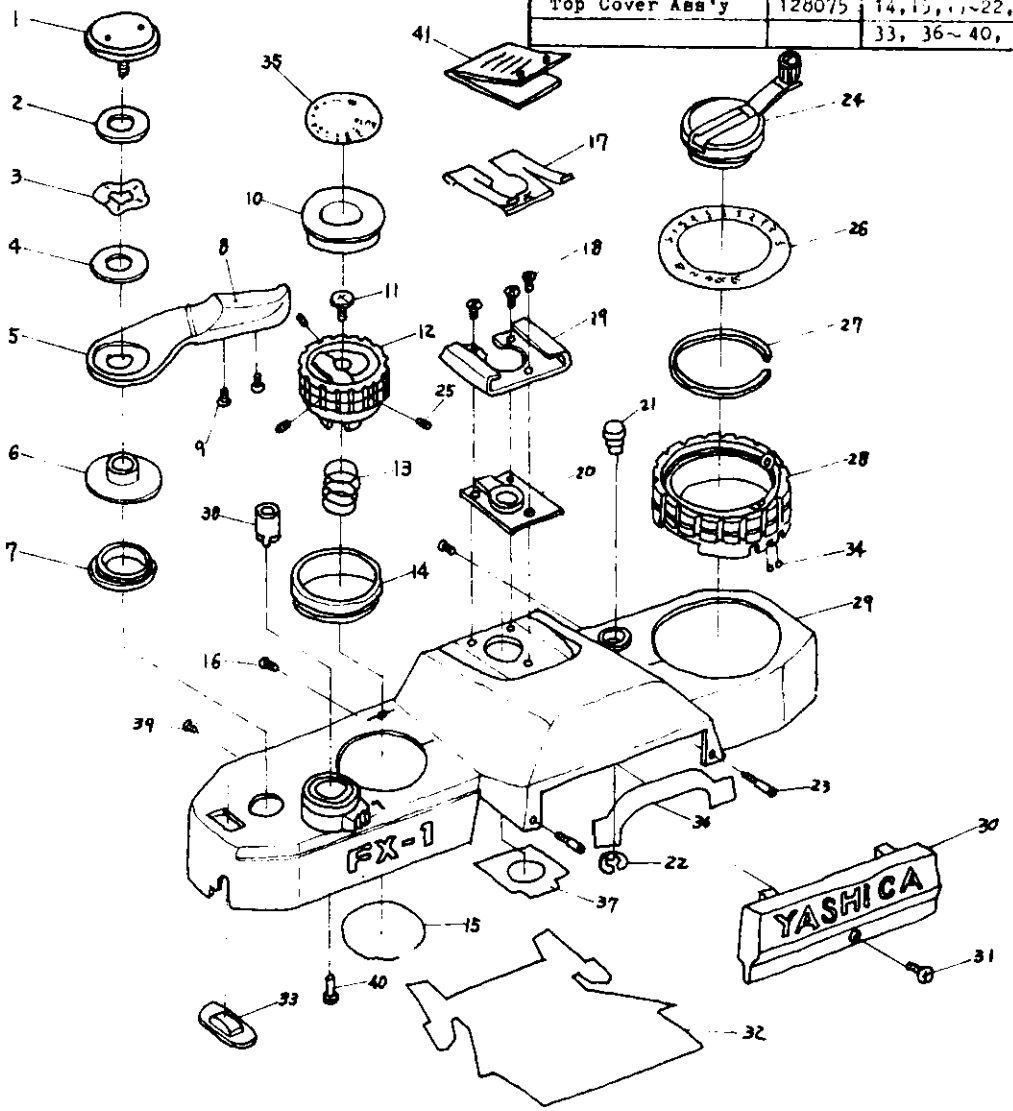

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Winding Lever Ass'y	128077	5, 8, 9
ASA Dial Ass'y	128082	28, 34,
Shutter Dial Ass'y	128098	10, 12, 25,
Top Cover Ass'y	128075	14, 16, 17~22, 29, 32,
		33, 36~40,

	PARTS NO	DESCRIPTION	QUANTITY
1	128658	Winding Lever S.S.	1
2	101405	Winding Lever Friction Spring Washer	1
3	101407	Winding Lever Pinion	1
4	60327124	[illegible]	1
5	★	Winding Lever Sub Ass'y	1
6	128659	Winding Lever Base	1
7	128654	Winding Lever Spacer	1
8	★	Winding Lever Knob	1
9	★	Winding Lever Knob S.S.	2
10	12833410	Shutter Dial Name Plate Base	1
11	128128	Shutter Dial S.S.	1
12	★	Shutter Dial Sub Ass'y	1
13	128339	Shutter Dial Spring	1
14	128341	Shutter Dial Holder	1
15	128343	Shutter Dial Holder Spring	1
16	170004	Top Cover S.S.	2
17	128110	Shoe Dress Plate	1
18	61823022	Accessory Shoe S.S.	3
19	128109	Accessory Shoe	1
20	128113	Contact Ass'y	1
21	128441	Check Button	1
22	66102525	Snap Ring E-25	1
23	128127	Front Plate S.S.	2
24	128078	Rewind Knob Ass'y	1
25	62501025	Shutter Dial Name Plate Base S.S.	3
26	128439	ASA Name Plate	1
27	128430	ASA Dial Ring	1
28	★	ASA Dial Sub Ass'y	1
29	★	Top Cover Sub Ass'y	1
30	128156	Front Name Plate	1
31	63713521	Front Name Plate S.S.	1
32	128587	Insulation Cover (A)	1
33	128853	Counter Window	1
34	66701520	Steel Ball	2
35	128340	Shutter Dial Name Plate	1
36	128588	Insulation Cover (B)	1
37	128586	Insulation Cover (C)	1
38	128106	Release Button	1
39	61902521	Release Button S.S.	1
40	104222	Release Button Guide	1
41	128115	Back Light-proof Plate	1

NOTE : (Parts with marked "★" are not available)

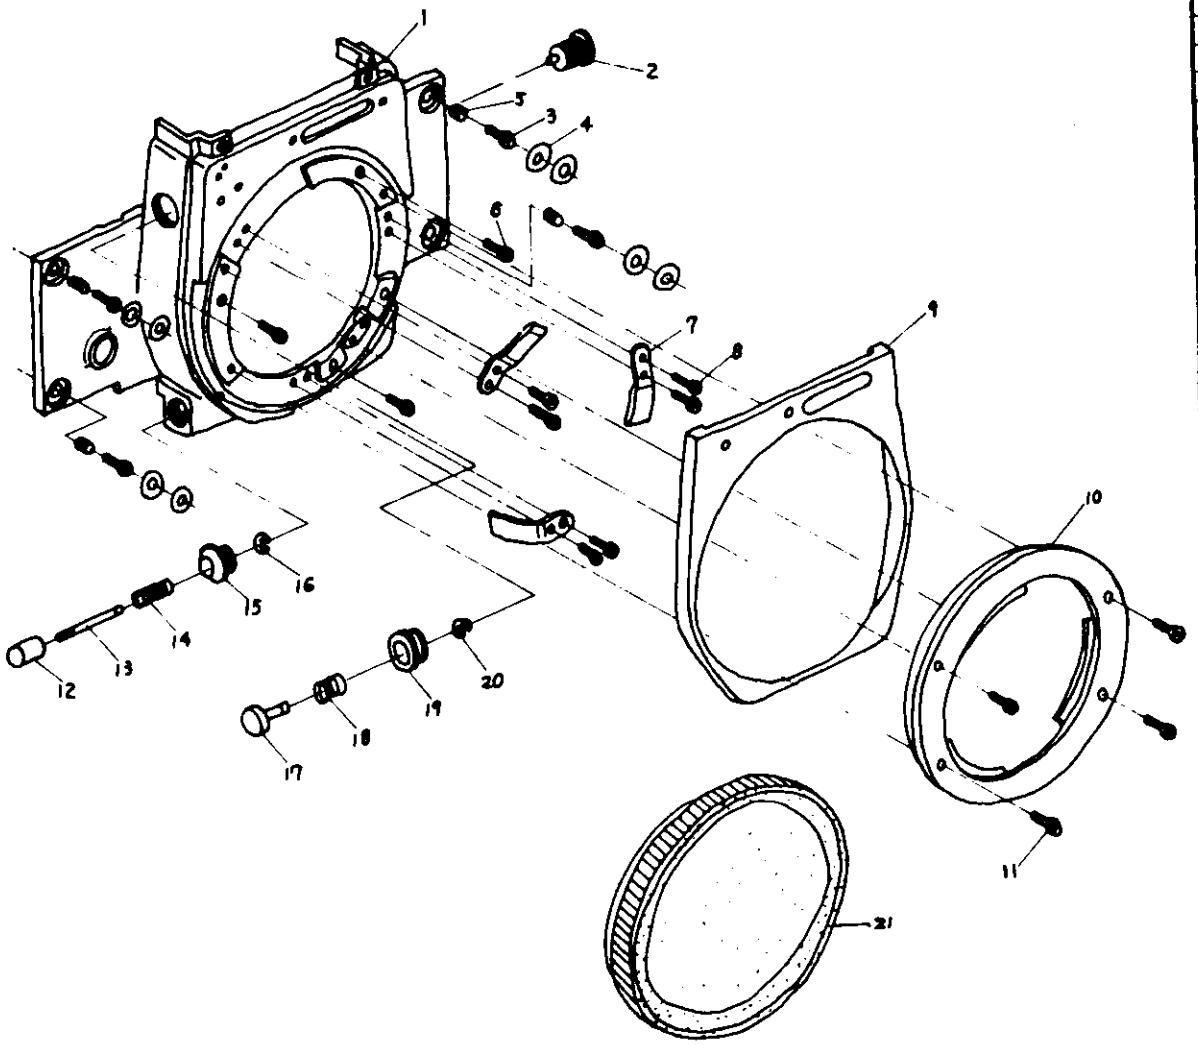

	PARTS NO	DESCRIPTION	QUANTITY
1	★	Mount Base Sub Ass'y	1
2	65008300	Synchro Terminal Ass'y	1
3	128128	Mount Base S.S.	4
4	60322110	Adjusting Washer	8
5	109194	Base Adjusting S.S.	4
6	61912524	"P" Stop Resistor S.S.	3
7	128149	Mount Spring	3
8	61911824	Mount Spring S.S.	6
9	128144	Mount Cover	1
10	128150	Lens Mount	1
11	61923521	Lens Mount S,S,	4
12	128147	Diaphragm Button	1
13	128145	Diaphragm Button Shaft	1
14	128148	Diaphragm Button Spring	1
15	128146	Diaphragm Button Holder	1
16	66101525	Snap Ring E-15	1
17	128154	Lens Lock Button	1
18	128155	Lens Lock Button Spring	1
19	128153	Lens Lock Button Holder	1
20	66101225	Snap Ring E-12	1
21	128118	Body Cap	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG NO.)
Mount Base Ass'y	128068	P2, 1,2,5～20,
		P3, 1～18,26,27,

NOTE : (Parts with marked "★" are not available)

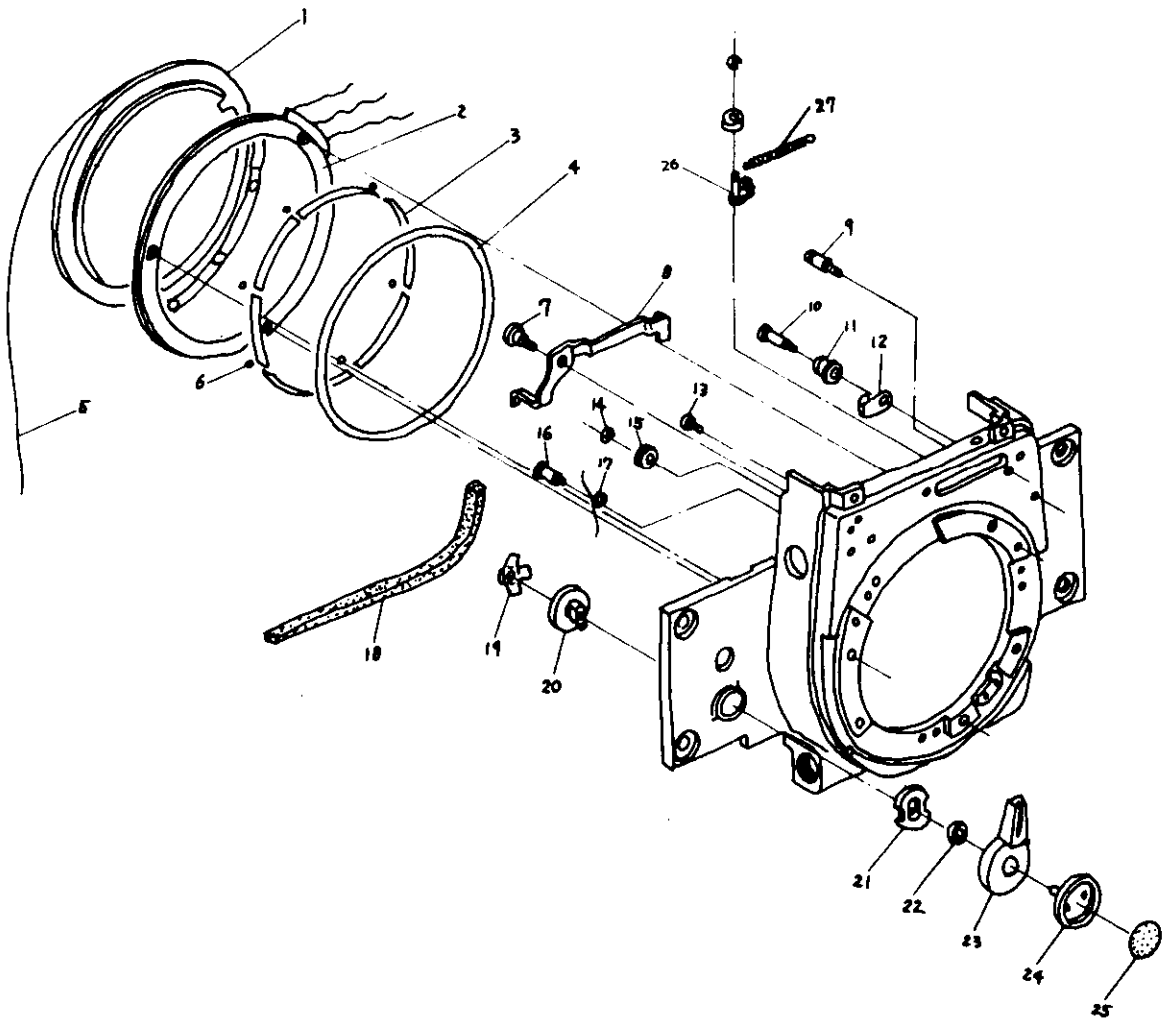

	PARTS NO	DESCRIPTION	QUANTITY
1	★	Slide Brush Sub Ass'y	1
2	★	"F" Stop Resistor Sub Ass'y	1
3	128173	Spacer Ring	6
4	128192	"F" Stop Resistor Washer	1
5	131837	"F" Stop Connecting Lace	1
6	66701220	Steel Ball ø 1.2	6
7	128159	Lock Lever Shaft	1
8	128088	Lock Lever Ass'y	1
9	128162	"F" Stop Registor Spring Holder	1
10	128167	Spring Holder Shaft	1
11	128194	Spring Holder	1
12	110928	Lead Wire Holder	1
13	128158	Connecting Lace S.S.	1
14	66100825	Snap Ring E-0.8	2
15	128163	Roller A	2
16	128198	Lock Lever Spring Shaft	1
17	128160	Lock Lever Spring	1
18	170070	Light-proof Moquette	1
19	170634	Plate Spring	1
20	121037	Self Timer Driving Plate Ass'y	1
21	121141	Self Lever Base	1
22	128386	Self Lever Collar	1
23	128180	Self Timer Lever	1
24	128181	Self Timer Lever S.S.	1
25	128182	Self Lever Leather	1
26	128089	Roller A Holder Ass'y	1
27	128161	"F" Stop Resistor Spring	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
"F" Stop Registor Ass'y	128092	1~6,

NOTE : (Parts with marked "★" are not available)

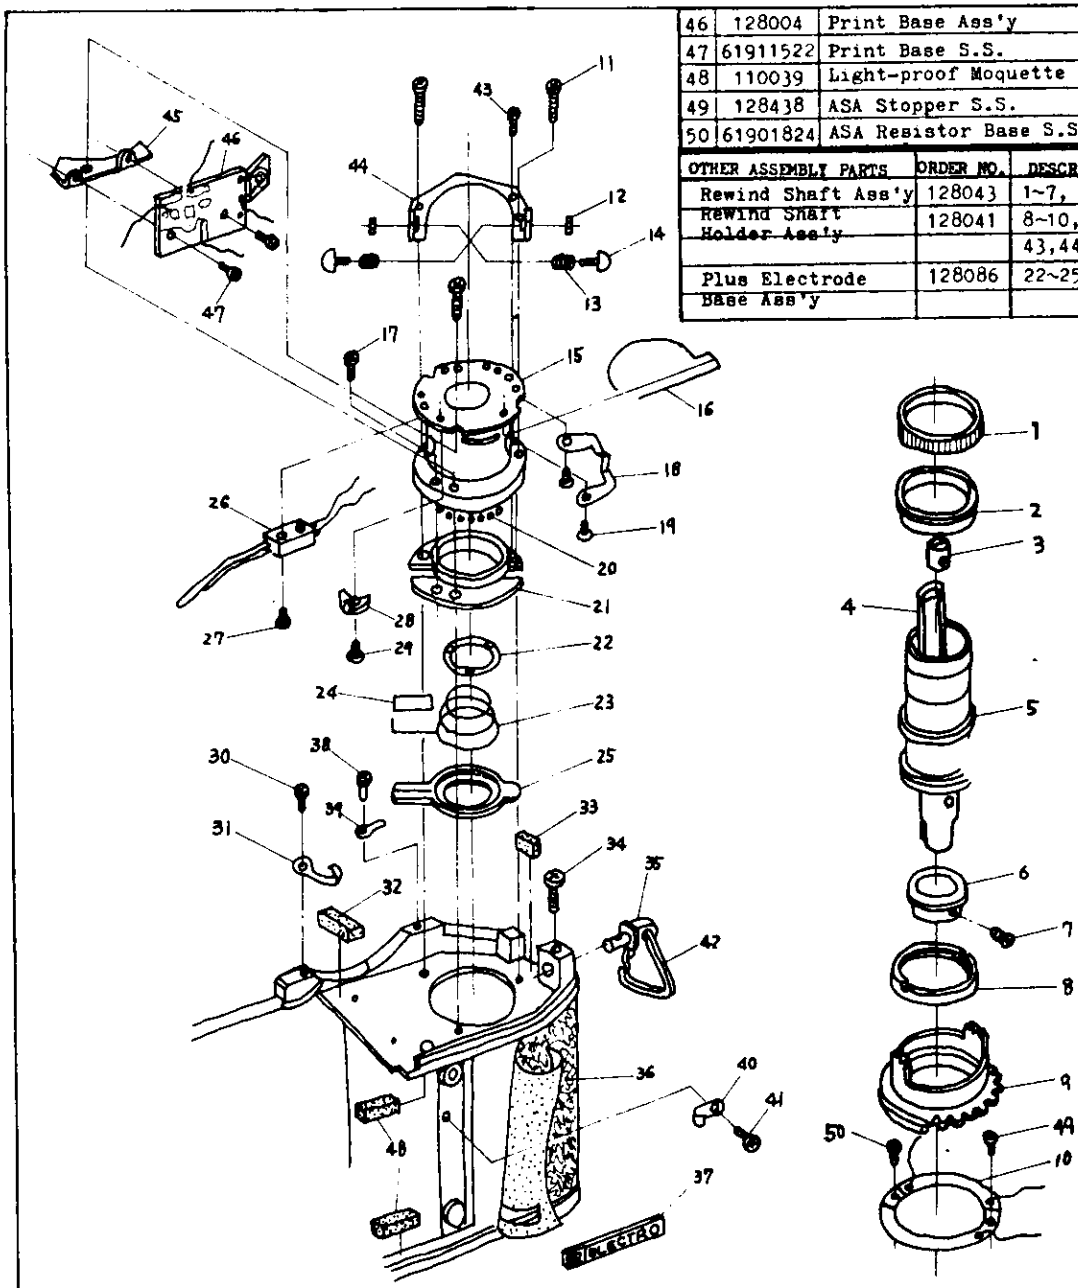

46	128004	Print Base Ass'y	1
47	61911522	Print Base S.S.	2
48	110039	Light-proof Moquette	2
49	128438	ASA Stopper S.S.	1
50	61901824	ASA Resistor Base S.S.	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Rewind Shaft Ass'y	128043	1~7,
Rewind Shaft Holder Ass'y	128041	8~10,12~21,26~29, 43,44,49,50,
Plus Electrode Base Ass'y	128086	22~25,

	PARTS NO	DESCRIPTION	QUANTITY
1	128446	Battery Case Ring	1
2	128460	Rewind Shaft Ring	1
3	128405	Plus Electrode Contact	1
4	402462	Battery Case Label	1
5	★	Rewind Shaft Sub Ass'y	1
6	128404	Plus Electrode Ring	1
7	61815522	Plus Electrode Ring S.S.	1
8	128436	ASA Indicator Pipe Nut	1
9	128038	ASA Indicator Pipe Ass'y	1
10	128437	ASA Resistor Base	1
11	63917022	Rewind Shaft Holder S.S.	3
12	66101225	Snap Ring E-12	2
13	128458	Brush Spring	2
14	128456	Brush	2
15	★	Rewind Shaft Holder	1
16	128409	Rewind Shaft Click Spring	1
17	61915022	Rewind Shaft Holder S.S.	1
18	128429	Exposure Correction Click Spring	1
19	61911524	Exposure Correction Click Spring S.S.	2
20	66701520	Steel Ball ø 1.5	34
21	128416	Rewind Shaft Holder Base	1
22	★	Electrode Slip Ring	1
23	★	Plus Electrode Spring	1
24	★	Plus Electrode Spring Fixer	1
25	★	Plus Electrode Base	1
26	128444	Battery Check Contact Base	1
27	61905024	Battery Check Contact Base S.S.	1
28	128454	ASA Dial Stopper	1
29	61912024	ASA Dial Stopper S.S.	1
30	61911524	Lead Wire Holder (II) S.S.	1
31	101172	Lead Wire Holder (II)	1
32	128195	Body Light-proof Moquette	1
33	128195	Body Light-proof Moquette	1
34	61927024	Strap Holder S.S.	2
35	65005101	Strap Holder	2
36	128191	Front Leather (B)	1
37	128107	"ELECTRO" Name Plate	1
38	61912222	Lug Plate S.S.	1
39	170446	Lug Plate	1
40	110928	Lead Wire Holder	1
41	61911524	Lead Wire Holder S.S.	1
42	128890	Strap Holder Ring	2
43	61915522	Brush Holder Plate S.S.	1
44	★	Brush Holder Plate Sub Ass'y	1
45	128580	Print Base Fitting Plate	1

NOTE : (Parts with marked "★" are not available)

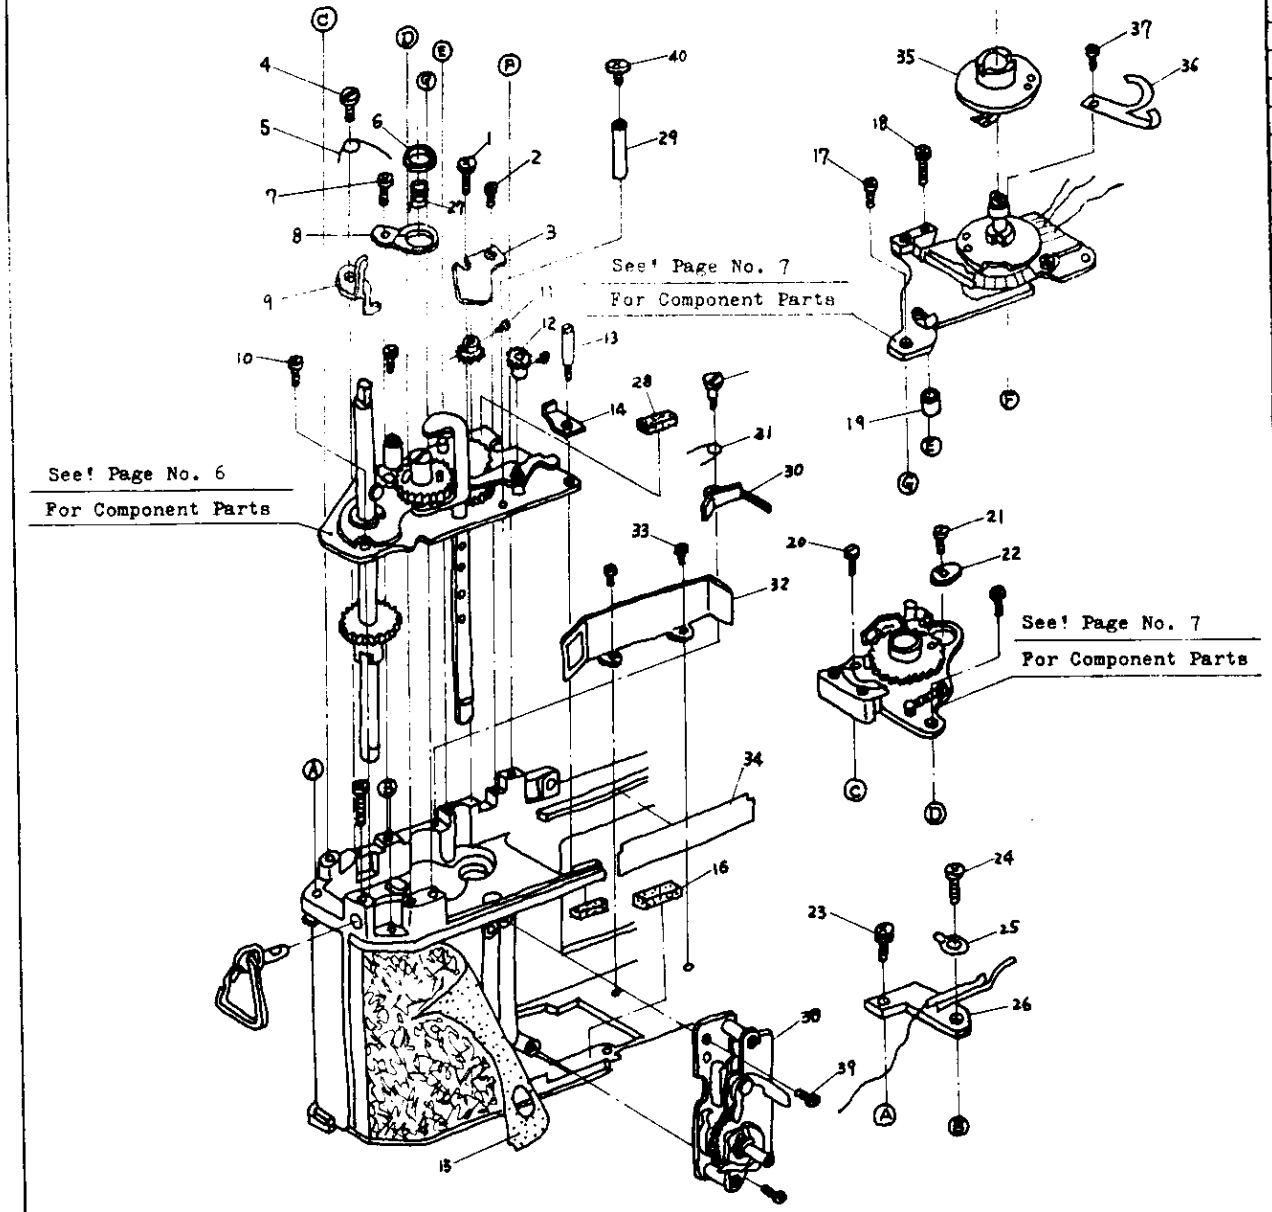

	PARTS NO	DESCRIPTION	QUANTITY
1	63924024	Turn Limit Plate S.S.	1
2	63824024	Turn Limit Plate S.S.	1
3	128226	Turn Limit Plate	1
4	121865	Returning Lever Shaft	2
5	121877	Returning Lever Spring	1
6	170252	Anti-rewind Collar	1
7	63913024	Anti-rewind Base Plate S.S.	1
8	128652	Anti-rewind Base Plate	1
9	104803	Returning Lever	1
10	63924024	S-W Base Plate S.S.	1
11	121233	Curtain Shaft Gear S.S.	1
12	107151	Curtain Shaft Gear	
	107166	(Either Choice)	1
13	128234	First Curtain Hook Lever Stopper	1
14	170130	Upper Gear Fixing Hook Regulating Plate	1
15	128190	Front Leather A	1
16	110039	Body Front Light-proof Moquette	2
17	63813522	Change Dial Base Plate S.S.	1
18	63918524	Change Dial Base Plate S.S.	1
19	128318	Auto-manual Change Base Plate Collar	1
20	63913024	Counter Base Plate S.S.	2
21	121866	Counter Cam S.S.	1
22	170510	Counter Cam	1
23	121433	Synchro Contact S.S.	1
24	63914022	Synchro Contact S.S.	1
25	170446	Lug Plate	1
26	★	Synchro Contact Sub Ass'y	1
27	128653	Winding Kick Spring	1
28	170270	S-W Base Plate Light-proof moquette	1
29	128229	S-W Base Plate Holder	1
30	128664	Winding Regulating Lever	1
31	128665	Winding Regulating Lever Spring	1
32	121035	Light-proof Plate Ass'y	1
33	61912024	Light-proof Plate S.S.	2
34	128387	Shutter Light-proof Curtain	1
35	128021	Slide Plate Ass'y	1
36	128589	Lead Wire Holder	1
37	63914022	Lead Wire Holder S.S.	1
38	121038	Self-timer Ass'y	1
39	61913024	Self-timer S.S.	2
40	66001013	Lamp Holder S.S.	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Synchro Contact Ass'y	128022	25,26,

NOTE : (Parts with marked "★" are not available)

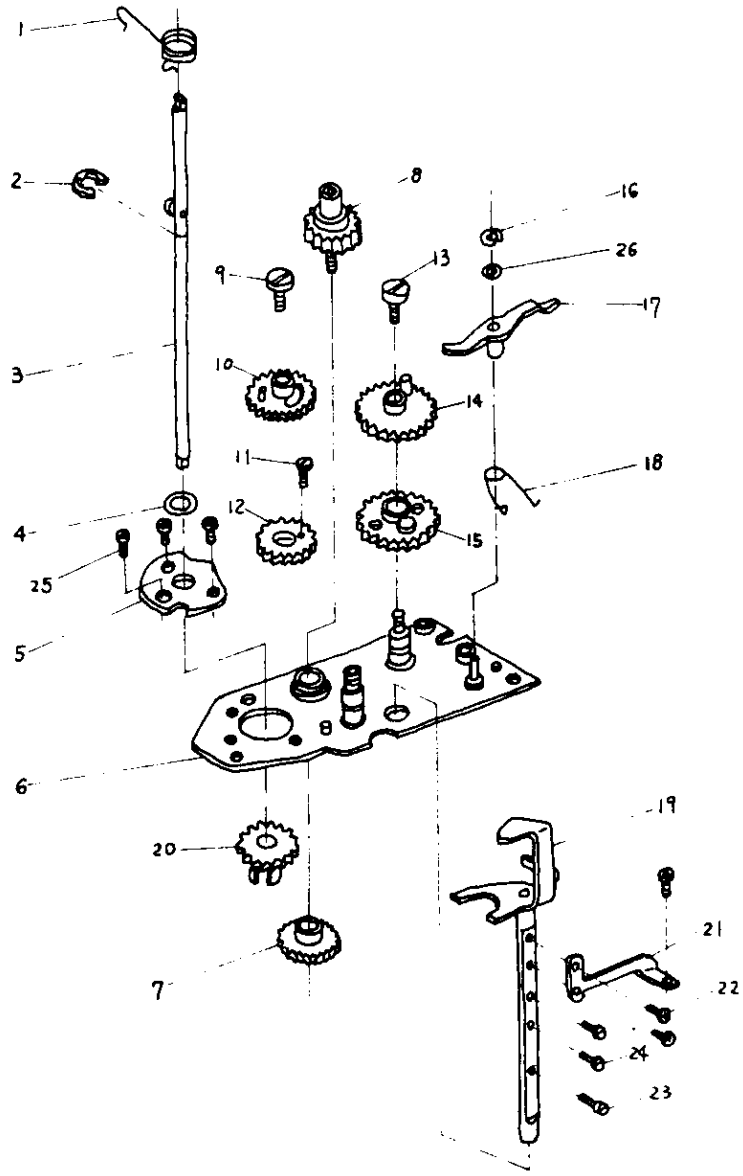

	PARTS NO	DESCRIPTION	QUANTITY
1	121605	Winding Spring	1
2	121658	Winding Shaft Fixer	1
3	121017	Winding Shaft Ass'y	1
4	60214110	Adjusting Washer(Choice)	1
	60224110		
	60254110		
5	128602	Winding Shaft Metal	1
6	★	S-W Base Plate Sub Ass'y	1
7	170250	Idle Gear (Lower)	1
8	128651	Idle Gear (Upper)	1
9	121429	Clutch Shaft S.S.	1
10	128009	Clutch Upper Gear Ass'y	1
11	121434	Winding Stud (Choice)	1
	121435		
	121436		
	128247		
	128248		
	128249		
12	170402	Clutch Lower Gear	1
13	121322	Gear Shaft S.S.	1
14	128013	Upper Gear Ass'y	1
15	128012	Lower Gear Ass'y	1
16	66101225	Snap Ring E-12	1
17	128010	Upper Gear Fixing Hook Ass'y	1
18	128236	First Curtain Fixing Hook Spring	1
19	128011	Clutch Shift Shaft Ass'y	1
20	121188	Spool Gear	1
21	128213	Shift Lever	1
22	61913024	Shift Lever S.S.	3
23	121423	Shift Shaft Pin (Choice)	1
	121430		
24	121431	Shift Shaft Pin (Choice)	1
	121432		
25	61912024	Winding Shaft Metal S.S.	3
26	60121810	Adjusting Washer	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
S-W Base Plate Ass'y	128015	5~19,25,26,

NOTE : (parts with marked "★" are not available)

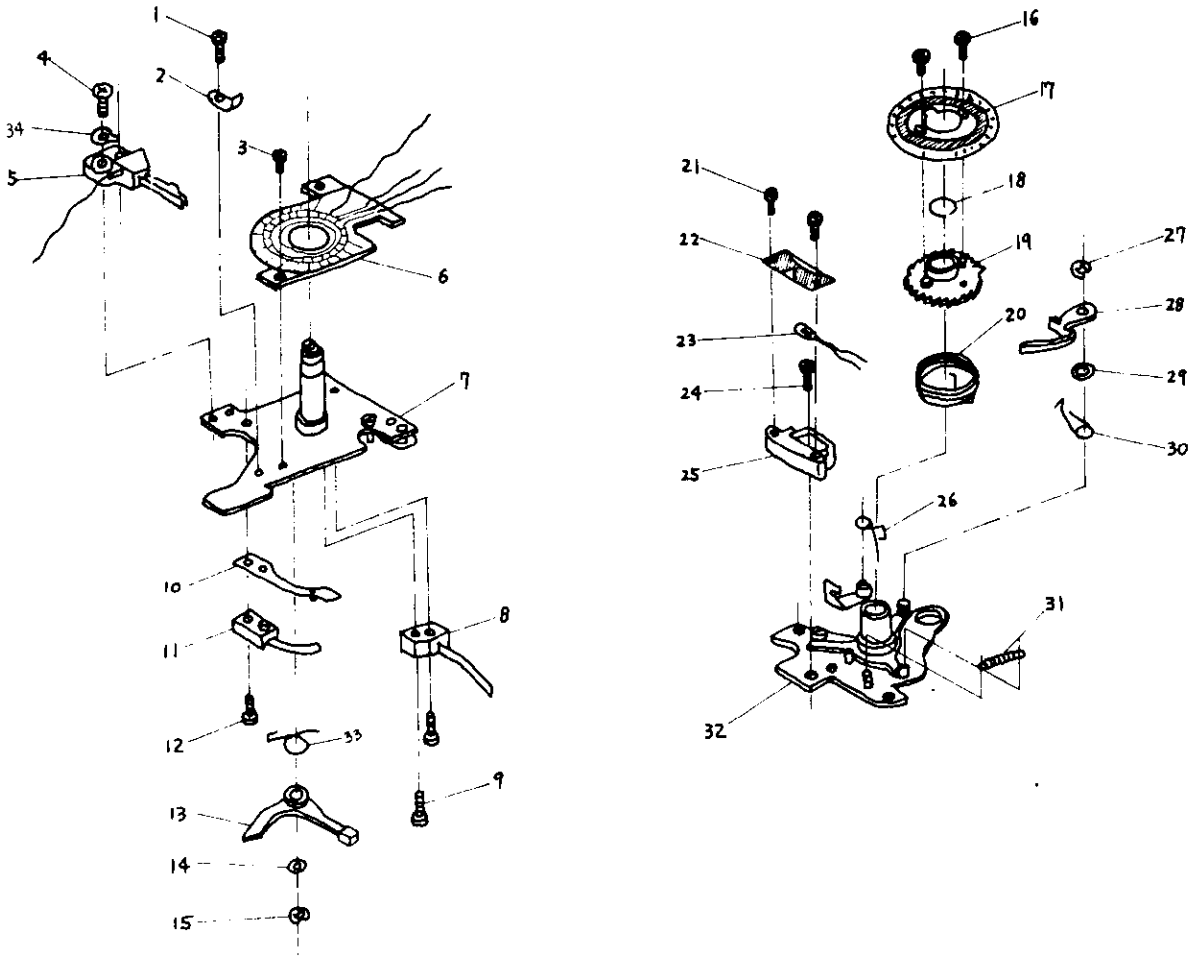

	PARTS NO	DESCRIPTION	QTY
1	61911524	Lead Wire Holder S.S.	1
2	110928	Lead Wire Holder	1
3	61911824	Manual Changing Base S.S.	1
4	61914022	Auto-manual Switch Base S.S.	1
5	128324	Auto-manual Switch Base Ass'y	1
6	128342	Manual Changing Base	1
7	★	Changing Dial Base Plate Sub Ass'y	1
8	128315	Trigger Switch Base Ass'y	1
9	61904024	Trigger Switch Base S.S.	2
10	128319	"B" Switch Brush (A)	1
11	128321	"B" Switch Base Ass'y	1
12	61913524	"B" Switch Base S.S.	1
13	128019	Trigger Connecting Lever Ass'y	1
14	60111810	Washer (Either Choice)	1
	60121810		
15	66101225	Snap Ring E-12	1
16	63901824	Counter Plate S.S.	2
17	128854	Counter Plate	1
18	121878	Counter Stopper Ring	1
19	101711	Counter Gear	1
20	121873	Counter Restore Spring	1
21	63901824	Counter Indicator S.S.	2
22	128855	Counter Indicator	1
23	128509	Battery Check Lamp	1
24	61802524	Counter Lamp Holder S.S.	1
25	128862	Counter Lamp Holder	1
26	121875	Stopper Claw Spring	1
27	121877	Shift Snap Ring	1
28	170501	Feeding Claw	1
29	60111210	Washer	1
30	121874	Feeding Claw Spring	1
31	121876	Counter Lever Spring	1
32	★	Counter Base Plate Sub Ass'y	1
33	128313	Trigger Spring	1
34	170446	Lug Plate	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Changing Dial Base Plate Ass'y	128020	1~15,33,34,
Counter Base Plate Ass'y	128C01	18~20, 26~32,

NOTE : (Parts with marked "★" are not available)

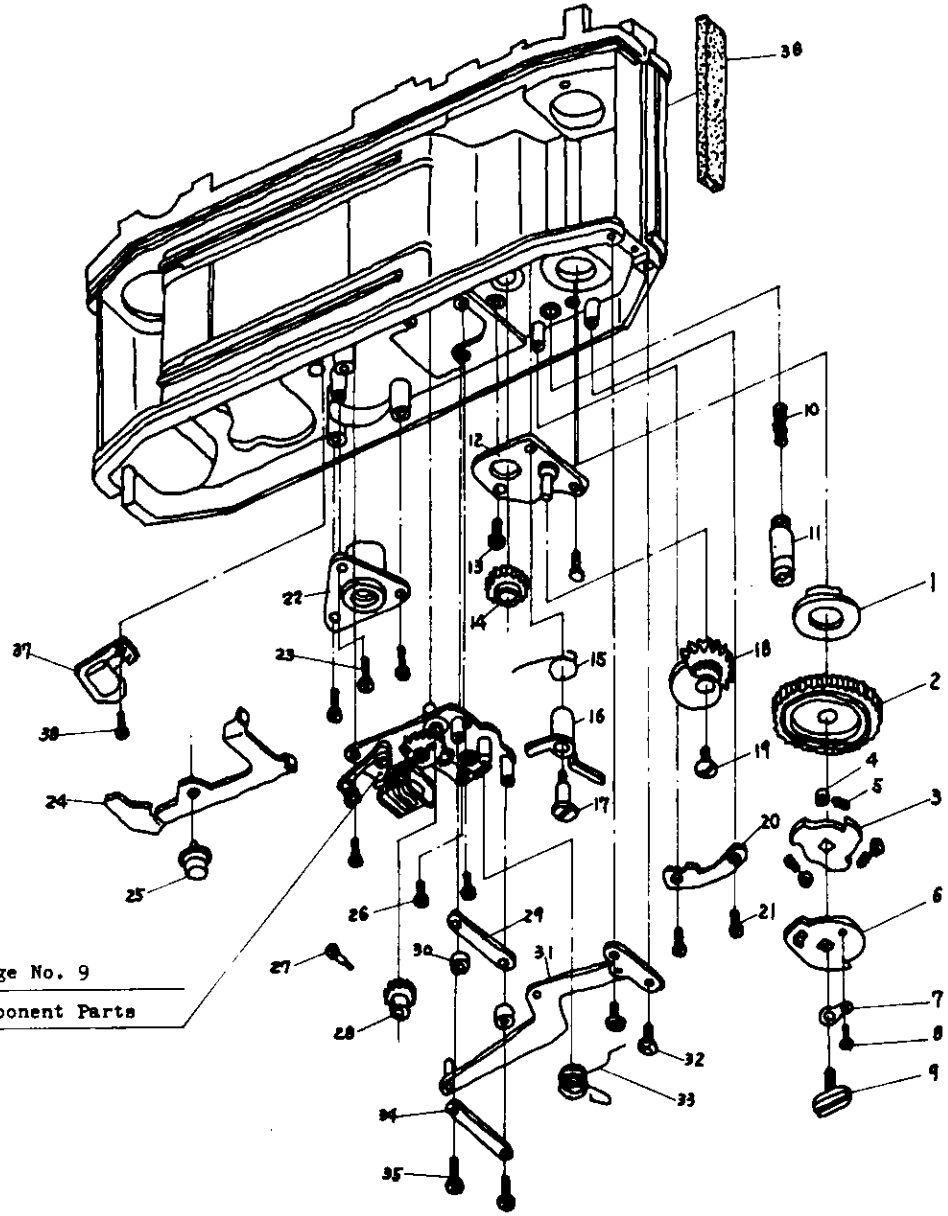

	PARTS NO	DESCRIPTION	QUANTITY
1	121187	Spool Lower Bearing	1
2	170212	Winding Gear	1
3	170213	Winding Clutch Plate	1
4	170214	Winding Roller	3
5	121618	Roller Holding Spring	3
6	128629	Winding Cam Plate	1
7	170232	Winding Shaft S.S. Washer (Lower)	1
8	61912024	Winding Shaft S.S. Washer S.S.	1
9	121633	Winding Shaft Set S.S.	1
10	128217	Shift Shaft Spring	1
11	128210	Shift Shaft Metal	1
12	121003	Winding Base Plate Ass'y	1
13	63922824	Winding Base Plate S.S.	2
14	170247	Sprocket Gear (Lower)	1
15	121628	Rewind Release Lever Spring	1
16	121004	Rewind Release Lever Ass'y	1
17	121629	Rewind Release Lever Shaft	1
18	128016	Mirror Cocking Cam Ass'y	1
19	121663	Intermediate Gear S.S.	1
20	104607	Winding Limit Plate	1
21	61813524	Winding Limit Plate S.S.	2
22	170006	Tripod Socket	1
23	61925024	Tripod Socket S.S.	3
24	128449	Back Cover Lock Plate	1
25	128116	Back Cover Open Button	1
26	63913024	S-W Shaft Holder Base Plate S.S.	3
27	121233	Curtain Shaft Gear S.S.	1
28	128258	Second Curtain Hook Gear	1
29	128671	Mirror Set Slide Plate A	1
30	128674	Slide Plate Spacer	2
31	128045	Mirror Cocking Lever Ass'y	1
32	61813024	Mirror Cocking Lever S.S.	2
33	128676	Set Lever Returning Spring	1
34	128672	Mirror Set Slide Plate B	1
35	61814024	Mirror Set Slide Plate S.S.	2
36	170034	Body Light-proof Moquette (B)	1
37	128017	Assistant Base Ass'y	1
38	63911822	Assistant Base S.S.	1

NOTE : (Parts with marked "★" are not available)

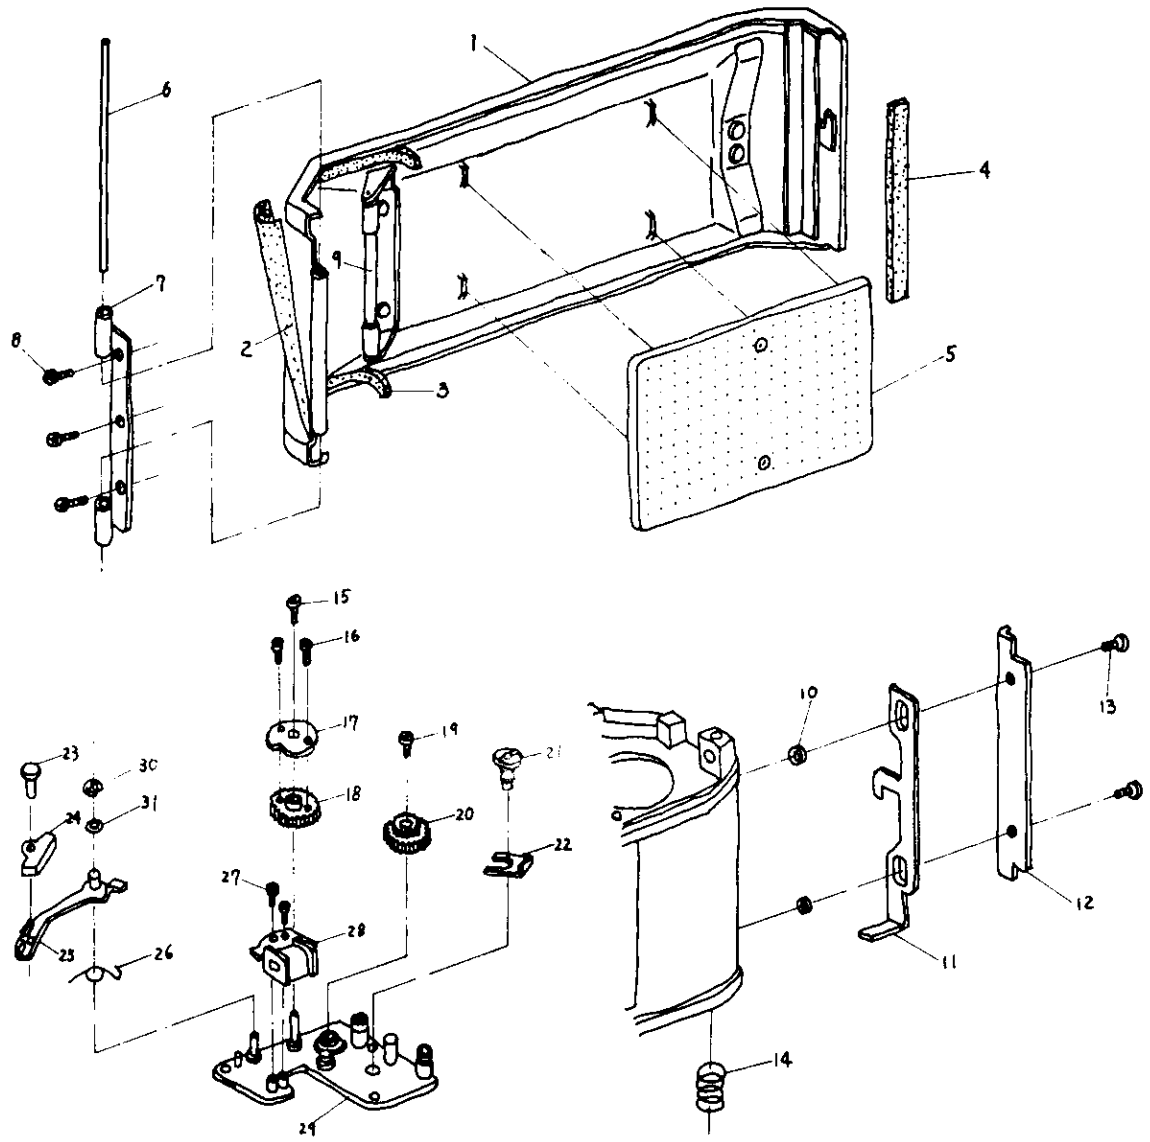

	PARTS NO	DESCRIPTION	QUANTITY
1	★	Back Cover Sub Ass'y	1
2	128142	Back Cover Leather	1
3	101184	Back Cover Light-proof Moquette (II)	2
4	170032	Back Cover Light-proof Moquette	1
5	101013	Film Pressure Plate Ass'y	1
6	170011	Back Cover Hinge Shaft	1
7	128136	Back Cover Hinge	1
8	61813024	Back Cover Hinge S.S.	3
9	170030	Film Roller	1
10	170010	Lock Plate Collar	2
11	128185	Lock Plate	1
12	104606	Lock Plate Cover	1
13	61813524	Lock Plate Cover S.S.	2
14	121122	Lock Plate Spring	1
15	128264	Hook Cam Shaft S.S.	1
16	61902524	Second Curtain Hook Cam S.S.	2
17	128266	Second Curtain Hook Cam	1
18	128265	Hook Cam Gear	1
19	128260	Hook Middle Gear S.S.	1
20	128037	Hook Middle Gear Ass'y	1
21	170154	Shutter Shaft Holder	1
22	121203	Shutter Shaft Regulating Washer	1
	121204		
23	★	Magnet	1
24	★	Magnet Iron Piece	1
25	★	Second Curtain Hook Lever Sub Ass'y	1
26	128274	Second Curtain Hook Spring	1
27	61903024	Magnet S.S.	1
28	128036	Magnet Ass'y	1
29	★	S-W Shaft Holder Base Plate Sub Ass'y	1
30	66101225	Snap Ring E-12	1
31	60111810	Washer (Either Choice)	1
	60121810	Washer	

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.#)
Back Cover Ass'y	128069	1~4, 6~9,
Second Curtain Hook Lever Ass'y	128034	23~25,
S-W Shaft Holder Base Plate Ass'y	128035	15~21, 23~31,

NOTE : (Parts with marked "★" are not available)

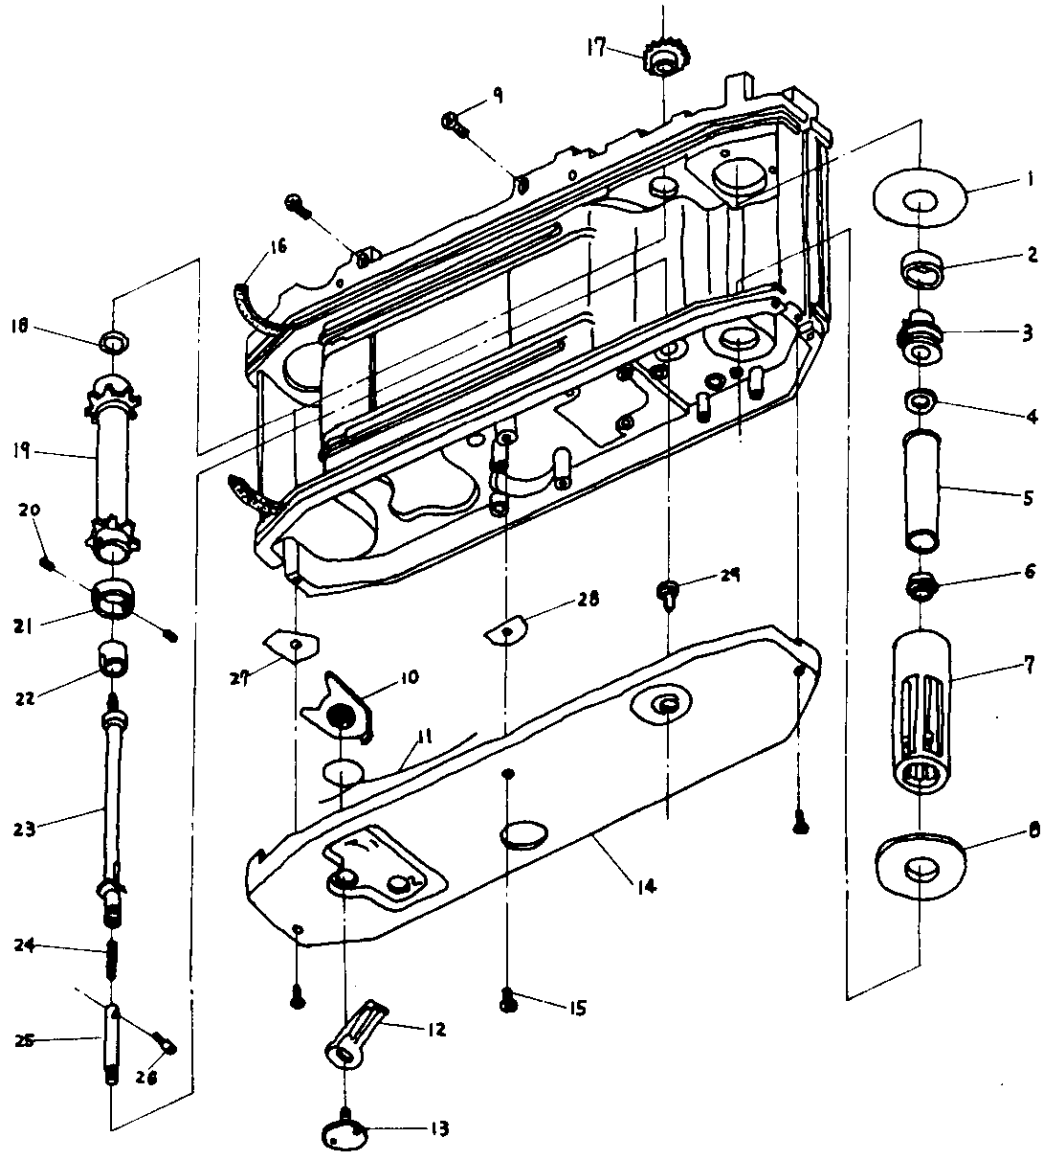

	PARTS NO	DESCRIPTION	QUANTITY
1	170216	Spool Washer	1
2	305664	"F" Gear Collar	1
3	121006	Friction Shaft Ass'y	1
4	121189	Inside Spool Metal	1
5	305658	Inside Spool	1
6	121185	Spool Holder	1
7	316668	Spool	1
8	121186	Spool Collar	1
9	61925024	Mirror Box S.S.	4
10	128084	Back Cover Lock Cam Ass'y	1
11	128125	Back Cover Lock Lever Spring	1
12	128123	Back Cover Lock Lever	1
13	128124	Back Cover Lock S.S.	1
14	★	Bottom Cover Sub Ass'y	1
15	61813024	Bottom Cover S.S.	3
16	170033	Body Light-proof Moquette (A)	2
17	128645	Sprocket Gear (Upper)	1
18	170242	Sprocket Adjusting Washer	1
19	170243	Sprocket	1
20	121655	Clutch Set S.S.	2
21	170271	Sprocket Collar	1
22	170244	Clutch	1
23	170241	Sprocket Shaft	1
24	121657	Rewind Button Spring	1
25	128640	Rewind Button Shaft	1
26	121656	Rewind Button Shaft S.S.	1
27	★	Bottom Cover Correction A	1
28	★	Bottom Cover Correction B	1
29	128648	Rewind Button	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Bottom Cover Ass'y	128085	10~14, 27,28,

NOTE : (Parts with marked "★" are not available)

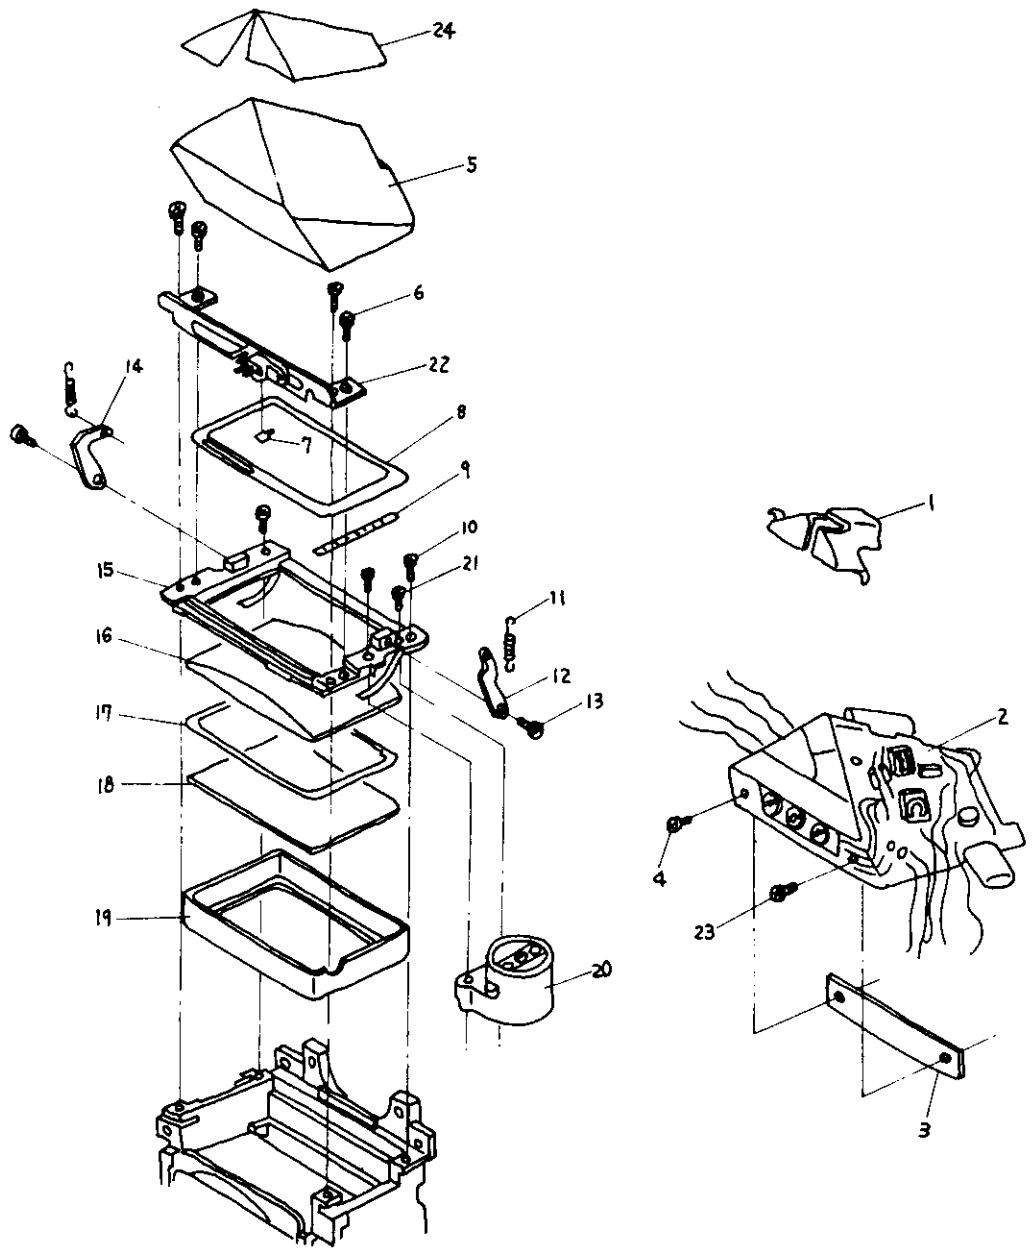

	PARTS NO	DESCRIPTION	TY
1	128832	Penta Prism Fixer	1
2	128002	Circuit Unit	1
3	128831	Penta Prism Fixer Cover	1
4	63912024	Penta Prism Fixer Cover S.S.	1
5	121811	Penta Prism	1
6	61912024	Indicator Driving Plate S.S.	2
7	128812	"F" Stop Indicator	1
8	128805	Range Frame	1
9	128823	Speed Indicator Plate	1
10	61913524	Penta Prism Holder S.S.	4
11	128836	Penta Prism Fixer Spring	2
12	128833	Penta Prism Fixer Arm (A)	1
13	128835	Penta Prism Fixer Arm S.S.	2
14	128834	Penta Prism Fixer Arm (B)	1
15	★	Penta Prism Holder Sub Ass'y	1
16	121812	Condenser Lens	1
17	128843	Condenser Lens Washer	1
18	121813	Fresnel Lens	1
19	128802	Condenser Lens Holder	1
20	128503	Speed Indicator Meter	1
21	61913024	Speed Indicator Meter S.S.	2
22	★	Indicator Driving Plate Sub Ass'y	1
23	128717	Insulation S.S.	1
24	128842	Penta Prism Cover	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Indicator Driving Plate Ass'y	128093	7,22,
Penta Prism Holder Ass'y	128072	8,9, 11~15,

NOTE : (Parts with marked "★" are not available)

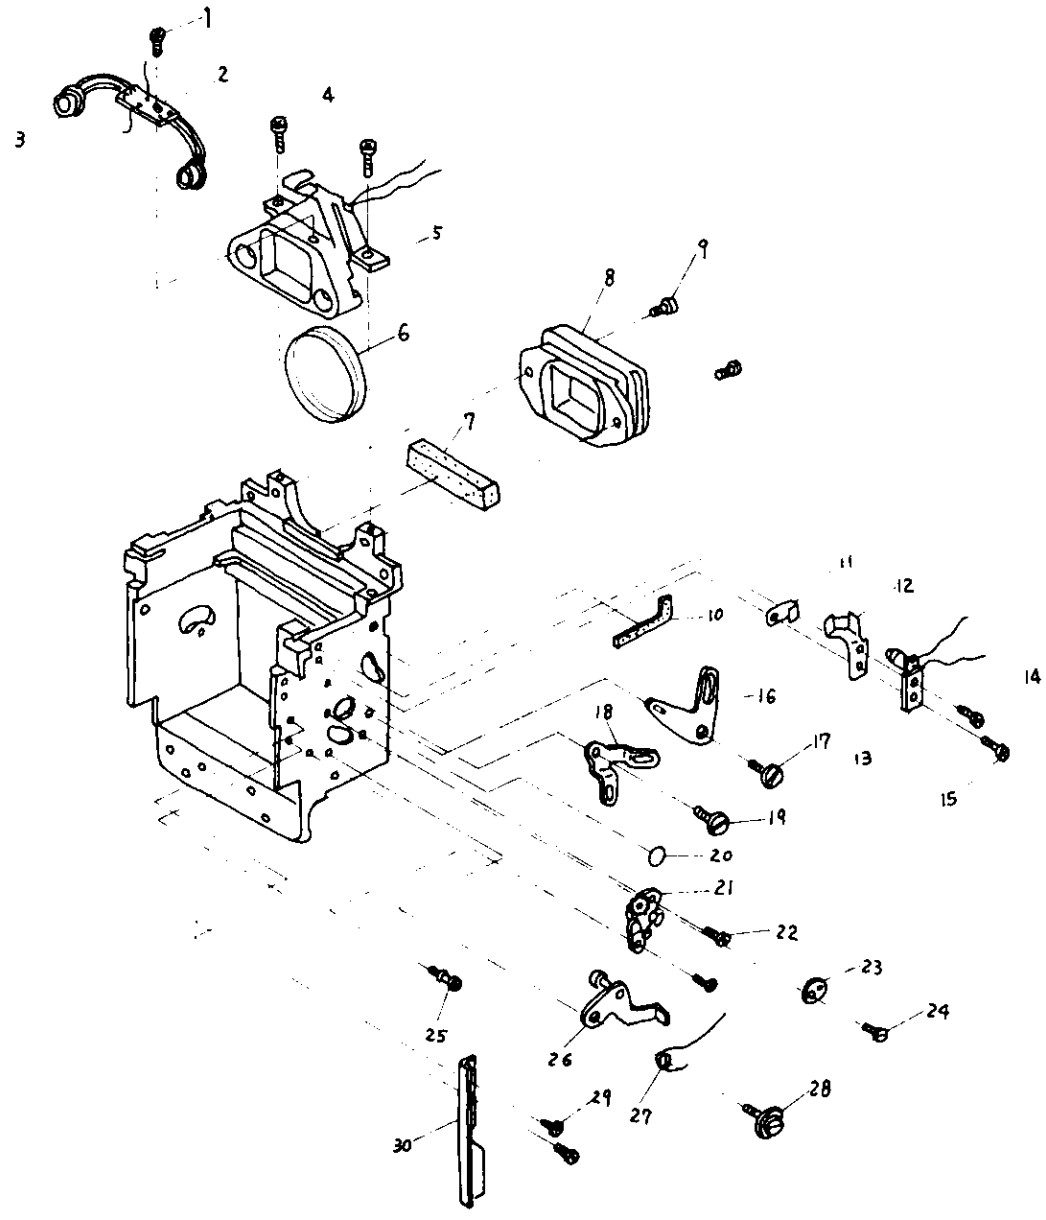

	PARTS NO.	DESCRIPTION	QUANTITY
1	61912222	CdS Base S.S.	1
2	★	CdS Base	1
3	★	CdS for 128	2
4	61914524	CdS Holder S.S.	2
5	★	CdS Holder Sub Ass'y	1
6	12881490	Eye-piece Lens Ass'y	1
7	170694	Eye-piece Lens Light-Proof Moquette	1
8	104765	Eye-piece Frame	1
9	61813524	Eye-piece Frame S.S.	2
10	128828	Meter Dust-proof Moquette	1
11	110928	Lead Wire Holder	1
12	128844	LED Holder	1
13	128066	LED Circuit Ass'y	1
14	128717	Isulation S.S.	1
15	61912524	LED Holder S.S.	1
16	128023	Governor Driving Lever A Ass'y	1
17	121820	Mirror Activating No1 Lever Shaft	1
18	128883	Governor Driving Lever (B)	1
19	121820	Mirror Activating No. 1 Lever Shaft	1
20	121808	Tripod Socket Washer	1
21	131299	Lug Governor	1
22	61902224	Lug Governor S.S.	2
23	170841	Mirror Regulating Lever Stopper	1
24	61112517	Mirror Regulating Lever Stopper S.S.	1
25	121825	Mirror Regulating Lever Shaft Holder	1
26	128096	Mirror Regulating Lever Ass'y	1
27	121831	Mirror Regulating Lever Spring	1
28	121824	Mirror Regulating Lever Shaft	1
29	61911824	Mirror Box Side Plate S.S.	2
30	128815	Mirror Box Side Plate	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG NO.)
CdS Holder Ass'y	128003	1~3, 5,
Mirror Box Ass'y	128065	P12, 7, 10~30,
		P13, 1~32,
		P14, 1~22,
		P15, 1~24,

NOTE : (Parts with marked "★" are not available)

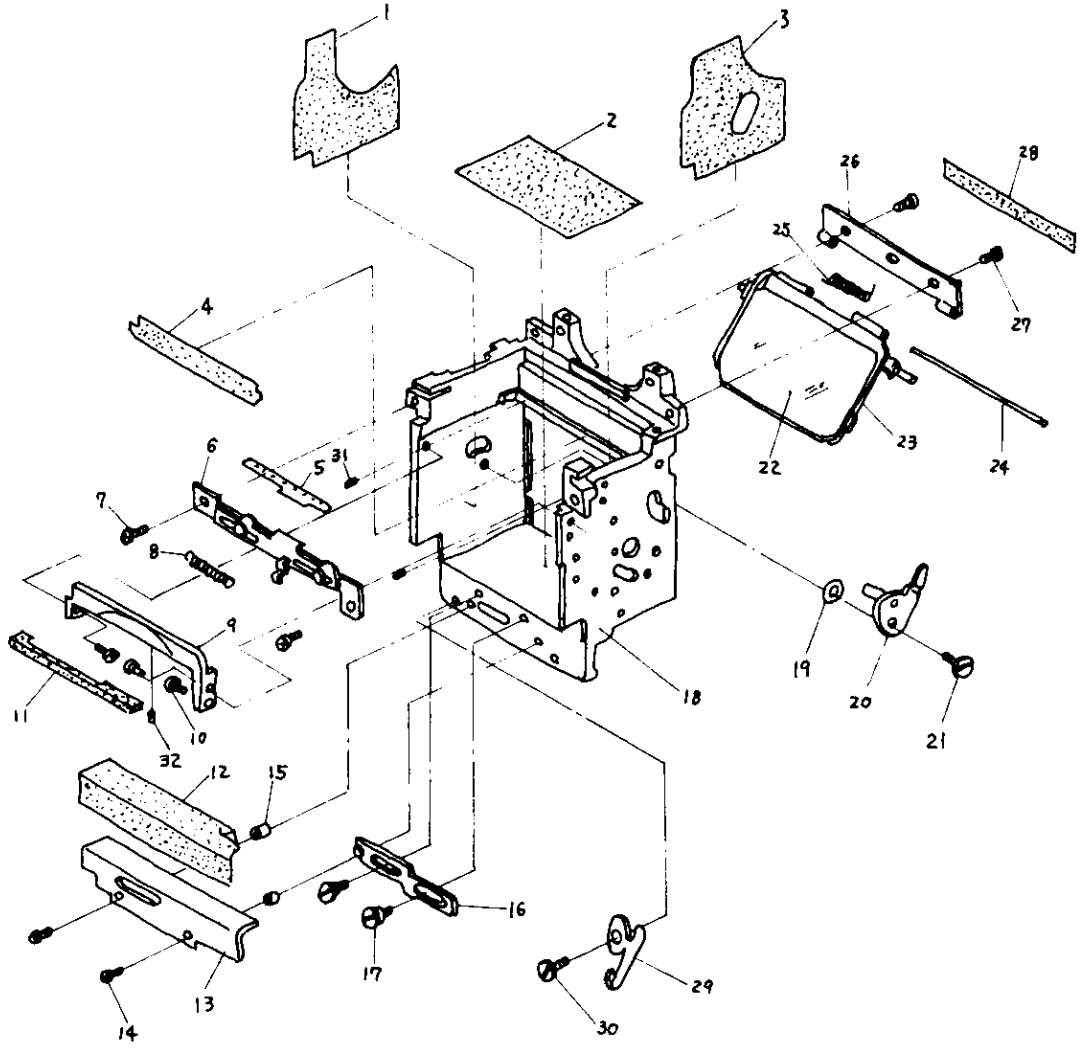

	PARTS NO	DESCRIPTION	QTY
1	128775	Inside Light-proof Paper (C)	1
2	128773	Inside Light-proof Paper (A)	1
3	128774	Inside Light-proof Paper (B)	1
4	128760	Mirror Plate Light-proof Curtain	1
5	128811	'F' Stop Indicator Plate	1
6	★	Reinforcement Plate Sub Ass'y	1
7	61823524	Reinforcement Plate S.S.	2
8	128818	'F' Stop Indicator Plate Sp.	1
9	128780	Condenser Lens Holder Fixer	1
10	61912524	Condenser Lens Holder Fixer S.S.	3
11	128777	Mirror Cushion	1
12	128776	Inside Light-proof Paper (D)	1
13	128771	Mirror Box Front Cover	1
14	61914024	Mirror Box Front Cover S.S.	2
15	128772	Mirror Box Front Cover Collar	2
16	128059	Diaphragm Lever Ass'y	1
17	101854	Check Slide Plate Shaft	2
18	★	Mirror Box Sub Ass'y	1
19	121753	Winding Lever Adjusting Washer	1
20	104029	Mirror Activating No.1 Lever Ass'y	1
21	121820	Mirror Activating No. 1 Lever Shaft	1
22	121810	R.F. Mirror	1
23	★	Mirror Plate Sub Ass'y	1
24	170835	Mirror Plate Hinge Shaft	1
25	121833	Mirror Restore Spring	1
26	★	Mirror Plate Hinge	1
27	61914024	Mirror Plate Hinge S.S.	2
28	170867	Mirror Box Light-proof Paper	1
29	128060	Diaphragm Connecting Lever (2) Ass'y	1
30	128770	Diaphragm Connecting Lever Shaft	1
31	121821	Focus Adjusting S.S. (A)	2
32	121822	Focus Adjusting S.S. (B)	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Reinforcement Ass'y	128076	6,8,
Mirror Plate Ass'y	128053	22~26, 28,

NOTE : (Parts with marked "★" are not available)

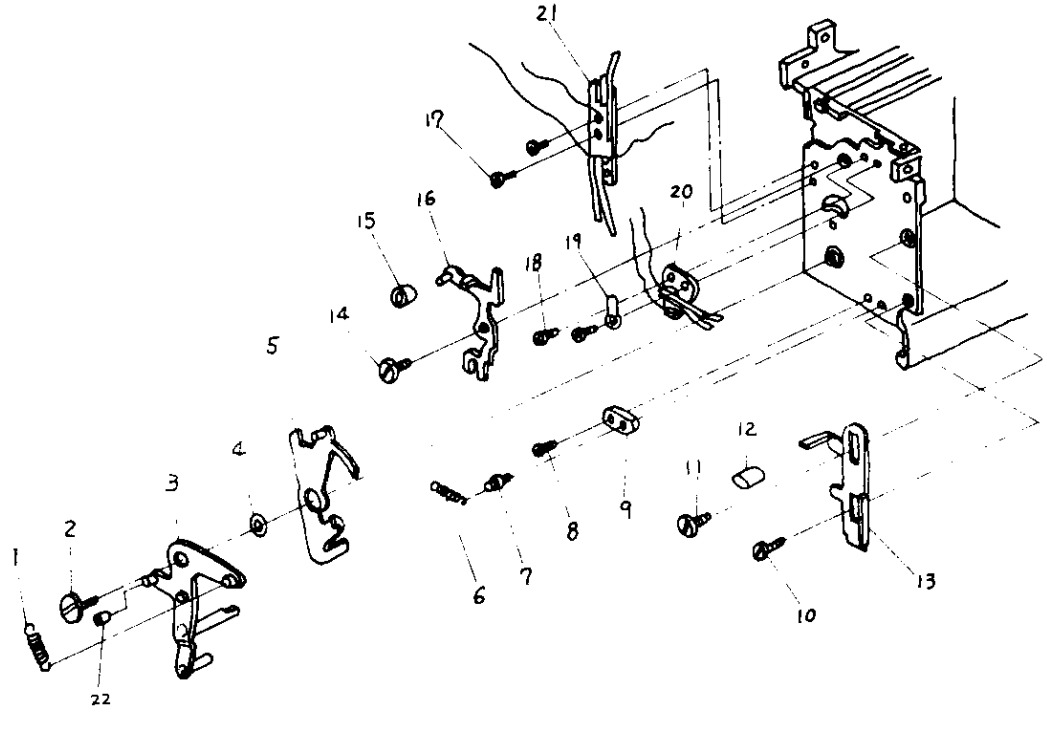

	PARTS NO	DESCRIPTION	QUANTITY
1	128707	Mirror Activating Spring	1
2	104705	Mirror Set Lever Shaft	1
3	★	Mirror Set Lever Sub Ass'y	1
4	60223310	Washer (Choice)	1
	60213310		
	60723310		
	60753310		
5	128057	Mirror Activating No. 2 Lever Ass'y	1
6	128761	Set Lever Return Spring	1
7	128712	Set Lever Stopper S.S.	1
8	61913524	Set Lever Stopper S.S.	1
9	128711	Set Lever Stopper	1
10	128715	Slide Plate Shaft	1
11	128719	Slide Plate S.S.	1
12	66912503	Vinyl Tube (2.5ø)	1
13	★	Slide Plate Sub Ass'y	1
14	121776	No. 2 Returning Lever Shaft	1
15	170879	Synchro Contact Insulation Tube	1
16	★	No. 2 Returning Lever Sub Ass'y	1
17	61912524	Main Switch S.S.	2
18	61912524	Main Switch "Ib" S.S.	2
19	170446	Lug Plate	1
20	128064	Main Switch "Ib" Ass'y	1
21	128062	Main Switch Ass'y	1
22	66911502	Vinyl Tube (1.5ø)	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Mirror Set Lever Ass'y	128058	3,22,
Slide Plate Ass'y	128047	12,13,
No. 2 Returning Lever Ass'y	128054	15,16,

NOTE : (Parts with marked "★" are not available)

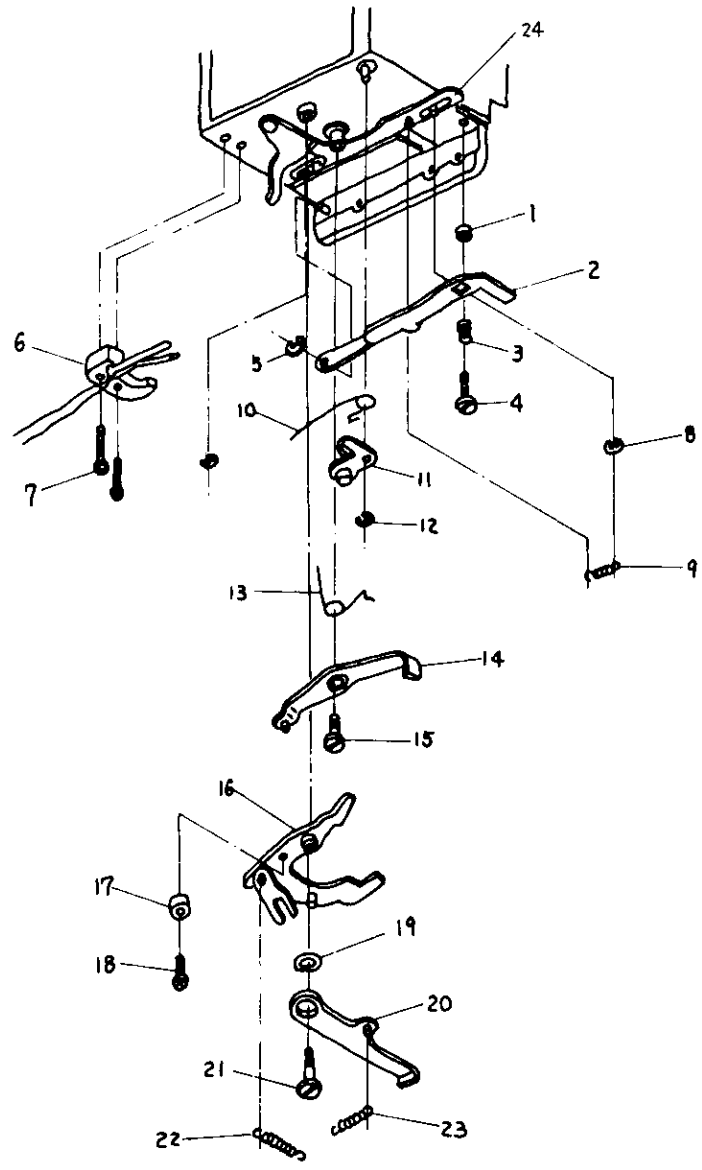

	PARTS NO	DESCRIPTION	TITY
1	60101810	Washer	1
2	128050	Starting Lever Ass'y	1
3	128753	Starting Lever Return Spring	1
4	128745	Starting Lever Guide Pin	1
5	66101525	Snap Ring E-15	1
6	128736	Memory Switch Ass'y	1
7	61915024	Memory Switch S.S.	2
8	66101525	Snap Ring E-15	2
9	128754	Restore Lever Returing Spring	1
10	128741	Mirror Activating Hook Spring	1
11	128054	Mirror Activating Lever Hook Ass'y	1
12	66101525	Snap Ring E-15	1
13	128720	Set Lever (II) Restore Spring	1
14	128055	Set Lever (II) Ass'y	1
15	128724	Set Lever (II) S.S.	1
16	128056	Diaphragm Driving Lever Ass'y	1
17	128785	Memory Switch Adjusting Collar	1
18	63913024	Diaphragm Driving Lever S.S.	1
19	60134610	Adjusting Washer (Either Choice)	1
	60124610		
20	128046	Diaphragm Lever Ass'y	1
21	128735	Diaphragm Lever Shaft	1
22	128737	Diaphragm Spring	1
23	128733	Diaphragm Lever Spring	1
24	128051	Restore Lever Ass'y	1

NOTE : (Parts with marked "★" are not available)

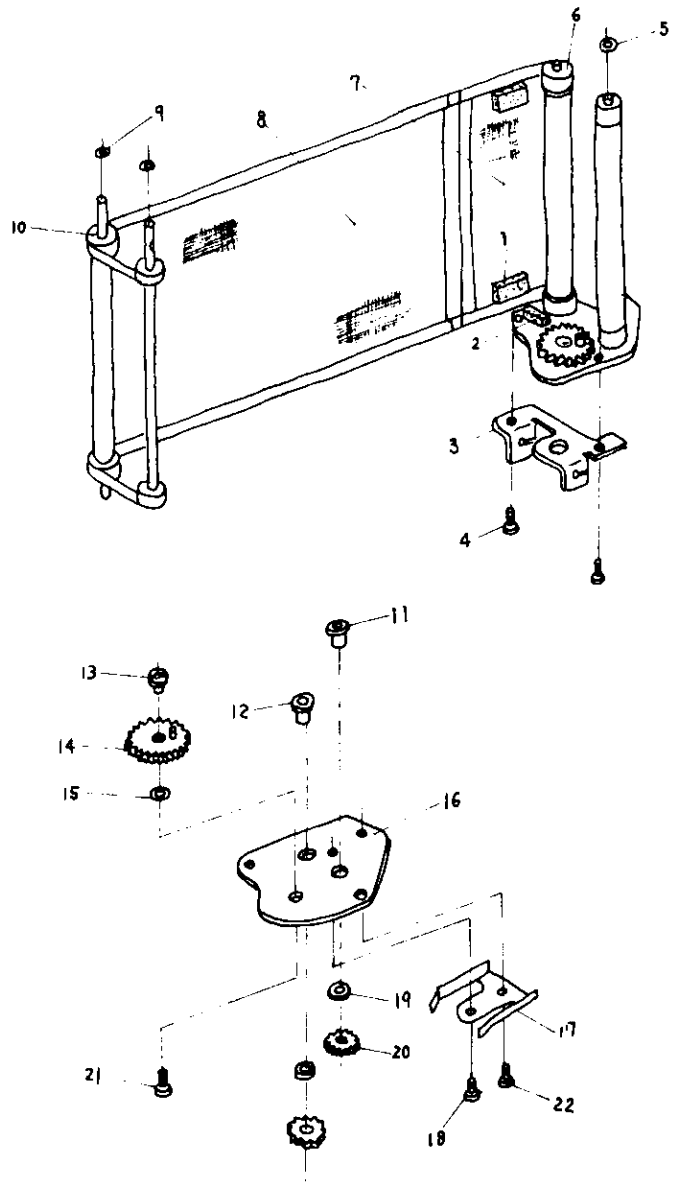

	PARTS NO	DESCRIPTION	QUANTITY
1	107673	Light-proof Moquette	2
2	110039	Light-proof Moquette	1
3	128448	Back Cover Lock Base Plate	1
4	61913524	Back Cover Lock Base Plate S.S.	2
5	60431510	Adjusting Washer	1
6	170172	Upper Roller	2
7	17016190	First Curtain Ass'y	1
8	17016290	Second Curtain Ass'y	1
9	60122110	Adjusting Washer	2
10	170156	Second Curtain Shaft Roller	2
11	107179	Spring Shaft Holder	1
12	170179	First Curtain Spring Shaft Holder	1
13	107186	Restore Gear Shaft	1
14	121184	Mirror Restore Gear	1
15	60252610	Adjusting Washer	1
16	★	Ratchet Wheel Base Plate	1
17	170182	Pawl Spring	1
18	63913024	Pawl Spring S.S.	1
19	170180	Ratchet Wheel Collar	2
20	170181	Ratchet Wheel	2
21	121323	Gear Shaft S.S.	1
22	61911524	Paw; Spring S.S.	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Shutter Curtain Ass'y	128031	1, 2, 5 22,

NOTE : (Parts with marked "★" are not available)

ORIGINAL

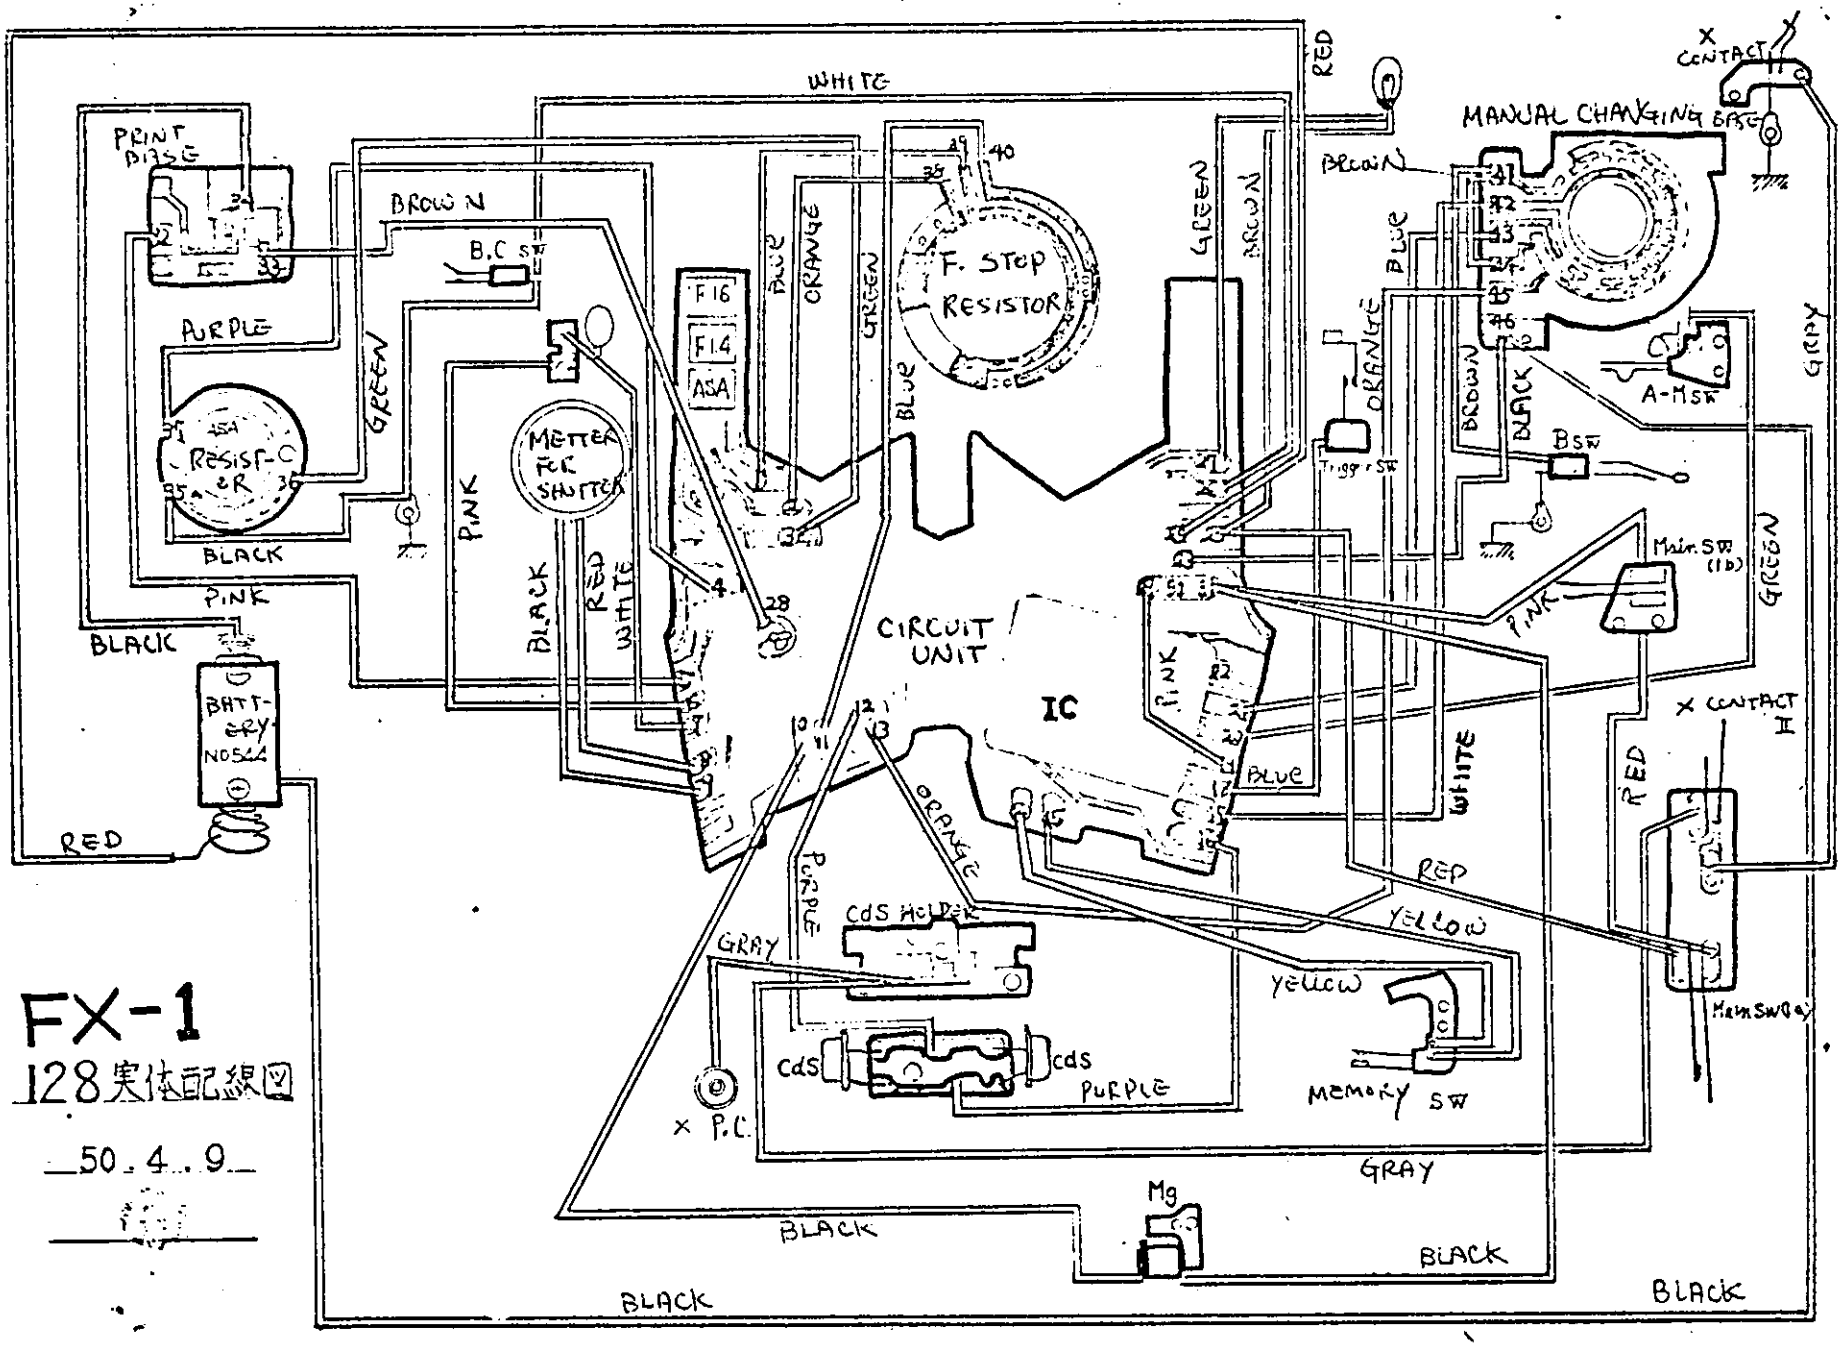

FX-1

128実体配線図

50.4.9